

4

Worktops, supports and accessories

A range of HTM Compliant worktops and accessories available from stock

Compact Grade worktops with polished and rounded external edges, ideal for island workstations and shown in use at University Hospital Lewisham

High pressure laminate worktops – WKT10 and WKT15

40mm thick with bullnose front profile

Widely used in healthcare and educational environments, this is one of the most common types of worktop. A durable product that is resistant to scratching, impact, chemicals, and heat.



Features and benefits

Advantages

- Extensive colour range
- Easy installation
- Can incorporate covered rear upstand

Disadvantages

- Postforming limited to two parallel edges
- Joints and edges can become vulnerable to moisture ingress

Recommended

- General ward areas
- Consultancy rooms
- Clean utilities
- Reception desks

Compact grade laminate worktops – WKT30

16mm thick with crescent edge front profile

A very hard-wearing worktop which is virtually impervious to water penetration and particularly suited for areas near water and for laboratories where greater chemical resistance is required.



Features and benefits

Advantages

- Impervious to liquids
- High impact and chemical resistance
- Radius corners possible
- Can be cut to almost any shape
- Very durable

Disadvantages

- Limited colour range
- Sheet size limitations – joints needed on long lengths and corners

Recommended

- All areas
- Laboratories
- Pharmacies
- Shaped worktops
- Island benches

WKT10



40mm bullnose front profile with no rear upstand

4m long worktop blanks

Size	Code
4m x 500mm	WKT10-WH-405
4m x 600mm	WKT10-WH-406
4m x 700mm	WKT10-WH-407
4m x 900mm	WKT10-WH-409

A1001 White

Size	Code
4m x 500mm	WKT10-GY-405
4m x 600mm	WKT10-GY-406
4m x 700mm	WKT10-GY-407
4m x 900mm	WKT10-GY-409

A2002 Light Grey

WKT15



40mm bullnose front profile with 50mm moulded rear upstand

3m long worktop blanks

Size	Code
3m x 500mm	WKT15-WH-305
3m x 600mm	WKT15-WH-306
3m x 700mm	WKT15-WH-307

A1001 White

Size	Code
3m x 500mm	WKT15-GY-305
3m x 600mm	WKT15-GY-306
3m x 700mm	WKT15-GY-307


A2002 Light Grey



3m long lay-on upstand

Size	Colour	Code
3000 x 50 x 18mm	White	UPS/50L/WE
3000 x 50 x 18mm	Light Grey	UPS/50L/GY

WKT30



16mm compact grade worktops with crescent edge profile


3m long worktop blanks

Size	Code
3m x 500mm	WKT30-WH-305
3m x 600mm	WKT30-WH-306
3m x 700mm	WKT30-WH-307

A1001 White

Size	Code
3m x 500mm	WKT30-GY-305
3m x 600mm	WKT30-GY-306
3m x 700mm	WKT30-GY-307

A2002 Light Grey

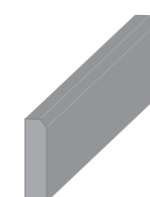

3m long lay-on upstand

Size	Colour	Code
3000 x 50 x 18mm	White	WKT30-UPS-WH
3000 x 50 x 18mm	Light Grey	WKT30-UPS-GY

Worktop supports



White cantilever leg

Adjustable height cantilever worktop support legs supplied with worktop fixing brackets and worktop tilt adjustment feature for perfectly level worktops. Suitable for low level power trunking.

D x H	Type	Code
550 x 680 - 730	67	WCL67
550 x 880 - 930	69	WCL69
600 x 680 - 730	77	WCL77
600 x 880 - 930	79	WCL79
750 x 680 - 730	87	WCL87
750 x 880 - 930	89	WCL89



White cantilever worktop support bracket

Heavy duty worktop support bracket for situations where the worktop supports need to be kept clear of the floor. Supplied complete with worktop fixing brackets.

Worktop depth	Code
600 - 700mm	WCA06
750 - 800mm	WCA07



Chrome legs

60mm diameter tubular steel leg in polished chrome finish and adjustable foot, suitable for all worktops.

D x H	Code
710 x 60mm	CL716
870 x 60mm	CL876
1100 x 60mm	CL116



White 2.4m ABS edged worktop support batten

Size	Code
2400 x 50 x 18mm	902224

Worktop cutting service and accessories



Bespoke shaped desk provided to fit circular wall at St Mary's Hospital, Portsmouth

HP laminate worktops

Cutting Service	Code
Short cut	WC90
Long cut	WR40
Edging Service	Code
Worktop end	WE90
Joining Service	Code
Mason's mitre joint (complete with jointing bolts)	WKT10-JT

Compact grade worktops

Cutting Service	Code
Short cut	WKT30-C90
Long cut	WKT30-R40
External Radius	Code
30mm radius	WKT30-RC
Joining Service	Code
Mason's mitre joint (complete with biscuits)	WKT30-JT



Cable outlets - 80mm diameter

Colour	Code
White	WEC80
Light Grey	LGC80
Silver	SRC80



Holesaws

Dia. (mm)	Code
59	HSD59
63	HSD63
79	HSD79



Worktop connecting bolts

Length	Code
65mm	WCB65
150mm	WCB150



Colorfill worktop repair kit

Description	Code
Light Grey	902251
White	902252
20ml Solvent	Solvent20



Arbor for holesaw

Description	Code
Arbor	ARB33



Aluminium end trims

Aluminium end trims provide a useful re-inforcement for exposed HP Laminate worktops which may be subject to impact damage with trolleys. File profile to suit front edge on site.

L x H	Code
630 x 30mm	AET633
900 x 30mm	AET903
630 x 40mm	AET634
900 x 40mm	AET904