

5

MFC shelves, panels and shelving support systems

18mm shelving boards
and wall-mounted support
systems available from stock

Easyrail clinical shelving system used with solid
surface worktop and cabinets with coloured doors
- London NHS Hospital




MFC shelving boards and panels

White high quality furniture grade melamine faced shelves and panels.

- From FSC certified sources
- 18mm thickness
- Edged all round with 2mm ABS high impact edging

2.8m lengths

Size	Code
300mm wide	SHE300
400mm wide	SHE400
500mm wide	SHE500

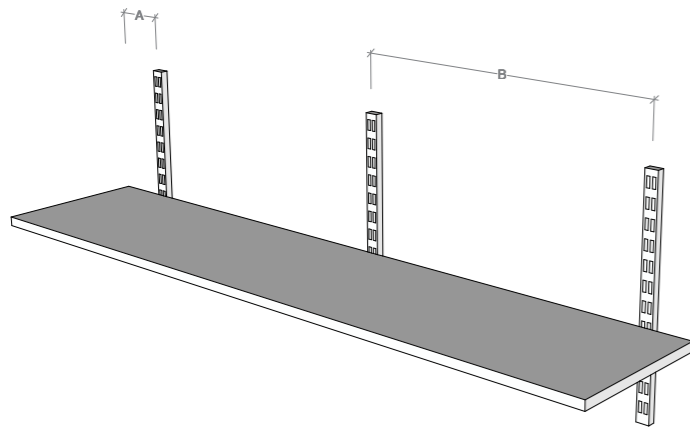


Upright spacing & size guide

Wall mounted uprights are normally positioned between 50mm – 100mm from the shelf ends (A) with a maximum recommended spacing of 750mm for 18mm thick boards (B).

Wall uprights are available in 7 different sizes to suit the number of shelves required and shelf pitch. The illustration below gives a guide for typical shelf spacing.

Corresponding shelf levels at typical 300mm spacing

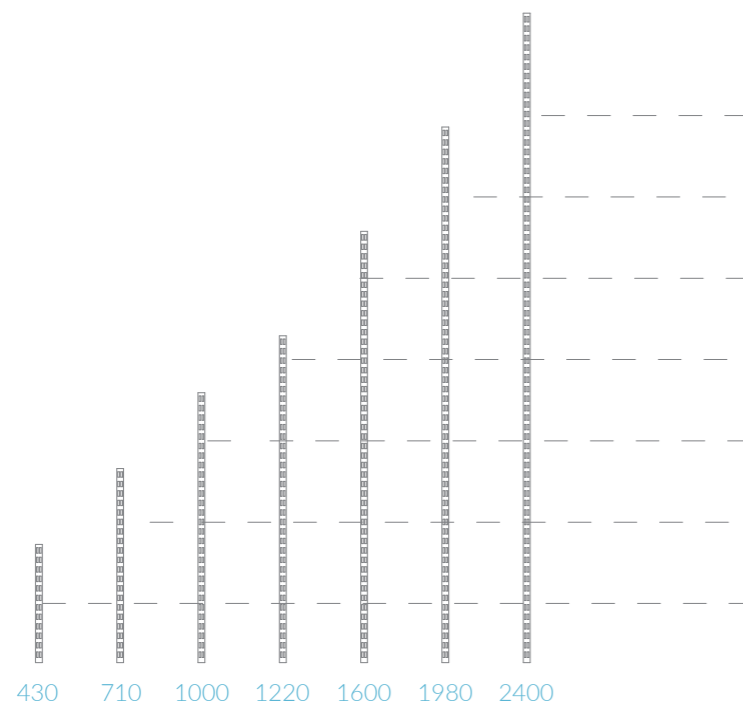

- 2400mm upright for 7 shelf levels
- 1980mm upright for 6 shelf levels
- 1600mm upright for 5 shelf levels
- 1220mm upright for 4 shelf levels
- 1000mm upright for 3 shelf levels
- 710mm upright for 2 shelf levels
- 430mm upright for 1 shelf level

Stirling wall mounted shelving support systems & handbag shelf

The Stirling range of wall mounted shelving components are from the original Spur shelving system and are manufactured to the same sizes and weight loadings and carry forward the 'steel-lok' mechanism.



Uprights

Double slot uprights finished in 'Protecta-cote' hard wearing antibacterial coating in white for the most stringent hygienic conditions.

Length	Code
2400mm	SWU24
1980mm	SWU19
1600mm	SWU16
1220mm	SWU12
1000mm	SWU10
710mm	SWU07
430mm	SWU04



Strongbeam type brackets

Strong cantilever brackets that fix direct to the wall. Non-adjustable once fixed.

Size	Code
100 x 75mm	WMB107
150 x 125mm	WMB1512
200 x 150mm	WMB2015
200 x 200mm	WMB2020
250 x 250mm	WMB2525
300 x 300mm	WMB3030
350 x 350mm	WMB3535



Brackets

Adjustable shelving brackets with the 'Steel-lok' mechanism which helps prevent accidental dislodgement from the shelving upright.

Length	Code
610mm	SWB61
570mm	SWB57
470mm	SWB47
370mm	SWB37S
320mm	SWB32
270mm	SWB27
220mm	SWB22
170mm	SWB17
120mm	SWB12



Heavy duty brackets

Heavy duty brackets with a deeper profile, recommended for heavier loads.

Length	Code
610mm	SWHB61
470mm	SWHB47
365mm	SWHB36

Medium duty brackets

With a deeper profile than the standard 370mm brackets, for loads over 50kg.

Length	Code
370mm	SWB37M



Clear Insert Retainers

Provide additional support for where shelves join in a run over a bracket.

Supplied	Code
Pack of 10	PCIR



Foldaway bracket

Light duty foldaway brackets that fix direct to the wall and provide a simple folding shelf. Two sizes available.

Length	Code
180mm	WFB180
280mm	WFB280



Handbag shelf

White compact grade waterproof handbag shelf suitable for all clinical areas.

Size (W x D)	Code
300 x 150mm	STF200



Raised edge shelf

Heavy duty raised edge shelf constructed from solid plastic composite board and supplied with concealed fixings.

Size (W x D)	Code
250 x 106mm	SHE0201

Stirling bookends



Spring rod bookends

The most popular bookend: simply clip into the upright to provide a useful shelf end.

Length	Code
250mm (pair)	WSB250
200mm (pair)	WSB200
150mm (pair)	WSB150



Universal bookends

These are designed for 15mm shelves and can be positioned anywhere along the shelf length.

Length	Code
150mm	WUB150



Square bookends

Can be fixed to the shelves or just positioned with one side under books to keep upright.

Length	Code
150mm	WSPB15
200mm	WSPB20
250mm	WSPB25



Shelf ends

The shelf end bracket has a return on the bottom edge that will support the shelf so provides both a shelf end and support brackets feature. Useful for creating a pigeon hole effect at different levels.

Length	Code
150mm (pair)	WSE150
200mm (pair)	WSE200
250mm (pair)	WSE250
300mm (pair)	WSE300

Easyrail® clinical shelving

A single shelf storage system suitable for all areas including clean rooms. Easyrail® is a white powder coated aluminium support system free of holes and slots and difficult to clean areas and is ultimately designed for improved infection control.



Invisible fixings



Clinical wipe clean shelving

Easyrail with 300mm deep white MFC shelf

Description	Size	Code
Easyrail + white MFC shelf	1000 x 300mm	ER1030
Easyrail + white MFC shelf	1500 x 300mm	ER1530
Easyrail + white MFC shelf	2000 x 300mm	ER2030
Easyrail + white MFC shelf	2700 x 300mm	ER2730

Performance guide

Wall material	Maximum load
Solid brick/masonry	40kg
Lightweight block	20kg
Plasterboard	15kg

Terms and conditions

Delivery

Speed range items included in this book are available on a 10-day lead time from order as standard. Lead times may vary depending on peak demand fluctuations and market forces outside of our control.


Warranty

All materials are supplied with a 12-month warranty period. Within this period, we will replace free of charge any components that proved to be of defective manufacture. The warranty does not cover misuse and damage from whatever cause.

As part of our programme of continuous improvement, Stirling reserve the right to change and update products without prior notice.

Regional offices

With our regional offices and distributor network, we are strategically placed to attend to your requirements with a personal service. Whether you are looking for a complete materials management system or equipment for a single room, contact the Sales Department today and we will be glad to help.

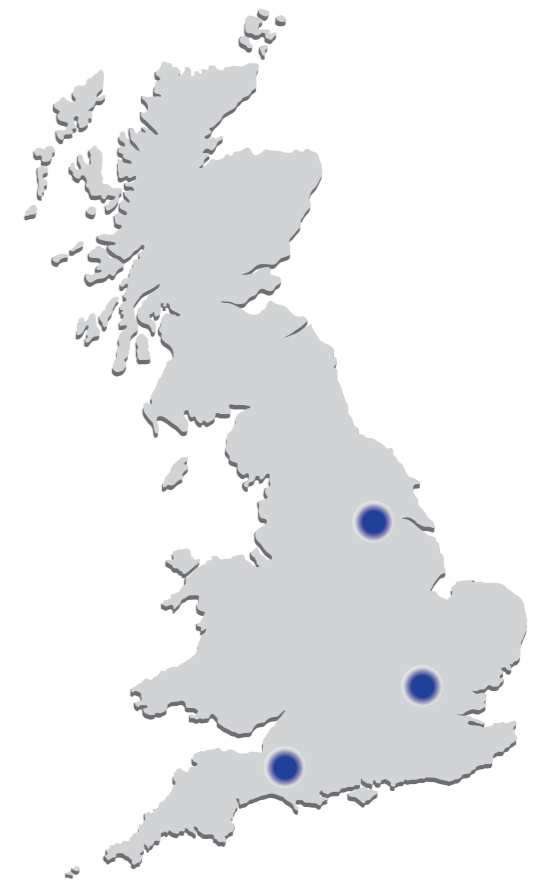

Sustainability

At Stirling Medical and Scientific Ltd we are committed to doing our part in caring for the environment and only use timber products from FSC and PEFC certified sources. All timber waste is recycled and processed as green fuel for UK Power stations. Packaging and protection materials are sourced from recycled material and collected from sites for re-use where appropriate.



Stirling Medical & Scientific are a major supplier of fitted furniture and storage solutions to the NHS and private healthcare groups. Please enquire for more information on our range of products and services.